
blurams

Solar Panel



User Manual

Packing List

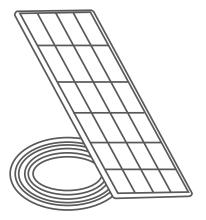

1 x Solar Panel




1 x Universal Joint



1 x Socket Nut



1 x Locking Screw Cap

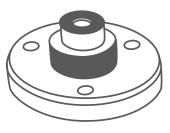

1 x Base




3 x Wall Anchors




1 x User Manual


How to install the solar panel?

1. Fix the base to the wall with screws. If the installation surface is soft or unstable, first use a $\Phi 6.0$ drill bit to drill a hole in the wall and then insert the wall anchors into the hole and fix the base with screws.

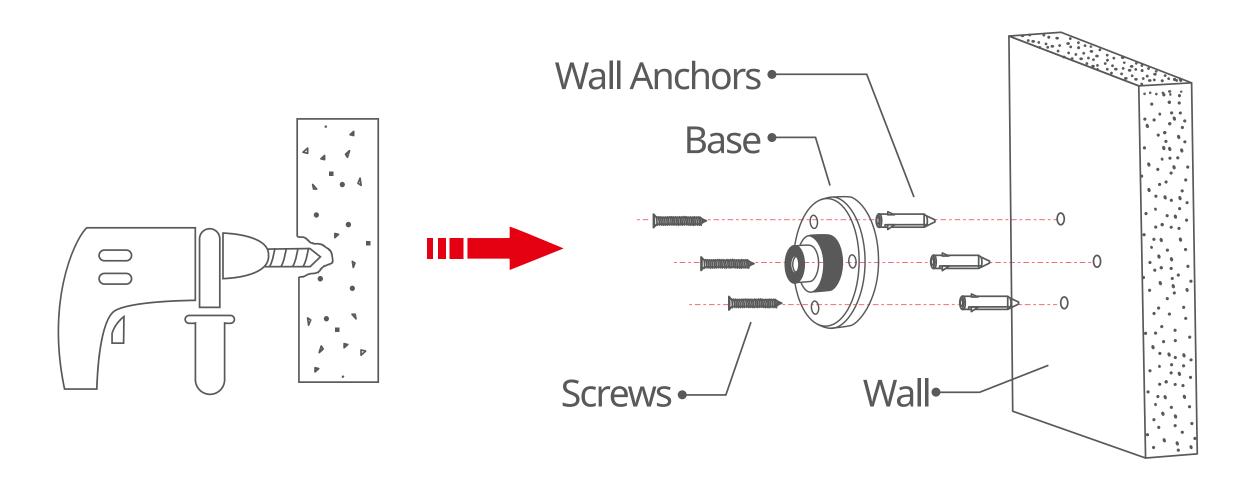


2. Install the locking screw cap into the universal joint and then screw the socket nut into the universal joint.

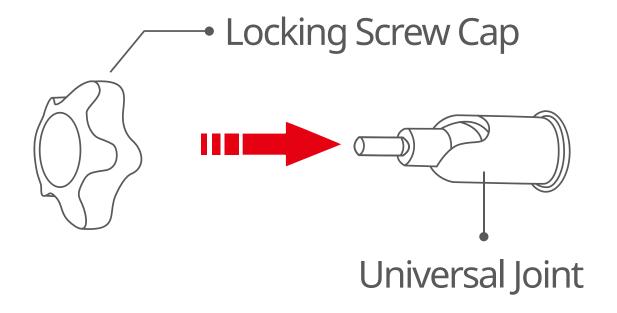


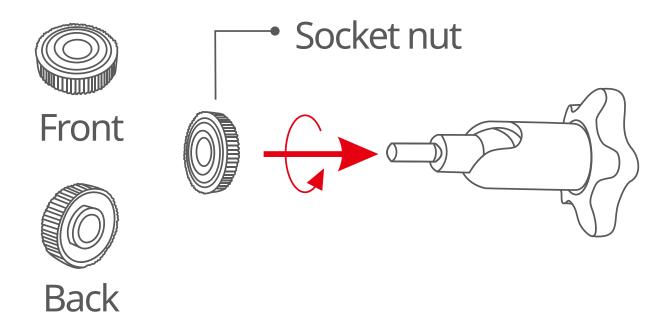


3. Screw the universal joint into the back of the solar panel. Tighten it firmly with the attached socket nut.

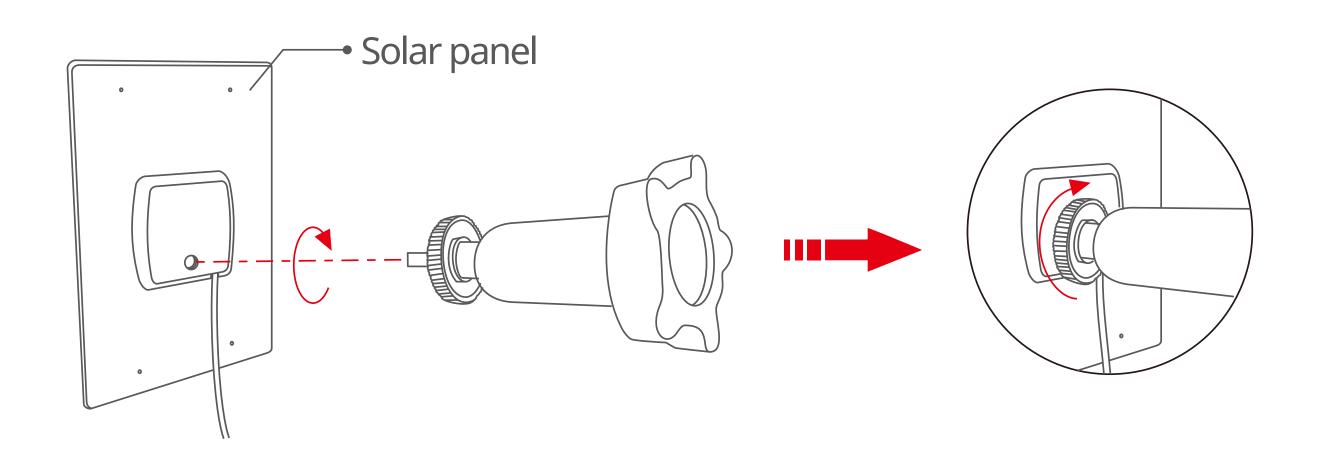


4. Rotate the locking screw cap into the base. Make sure that the universal joint is angled upward.

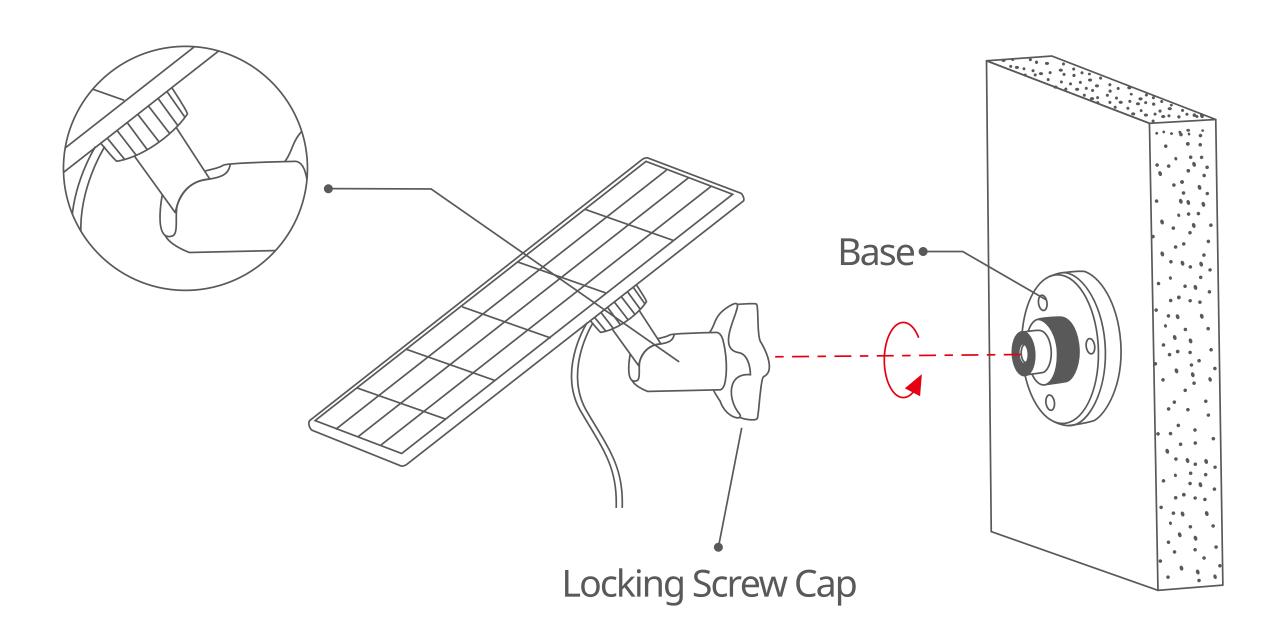

5. If you want to adjust the position of the solar panel, loosen the locking screw cap first, then rotate the sleeve rod, and tighten the locking screws cap when the panel is in position.

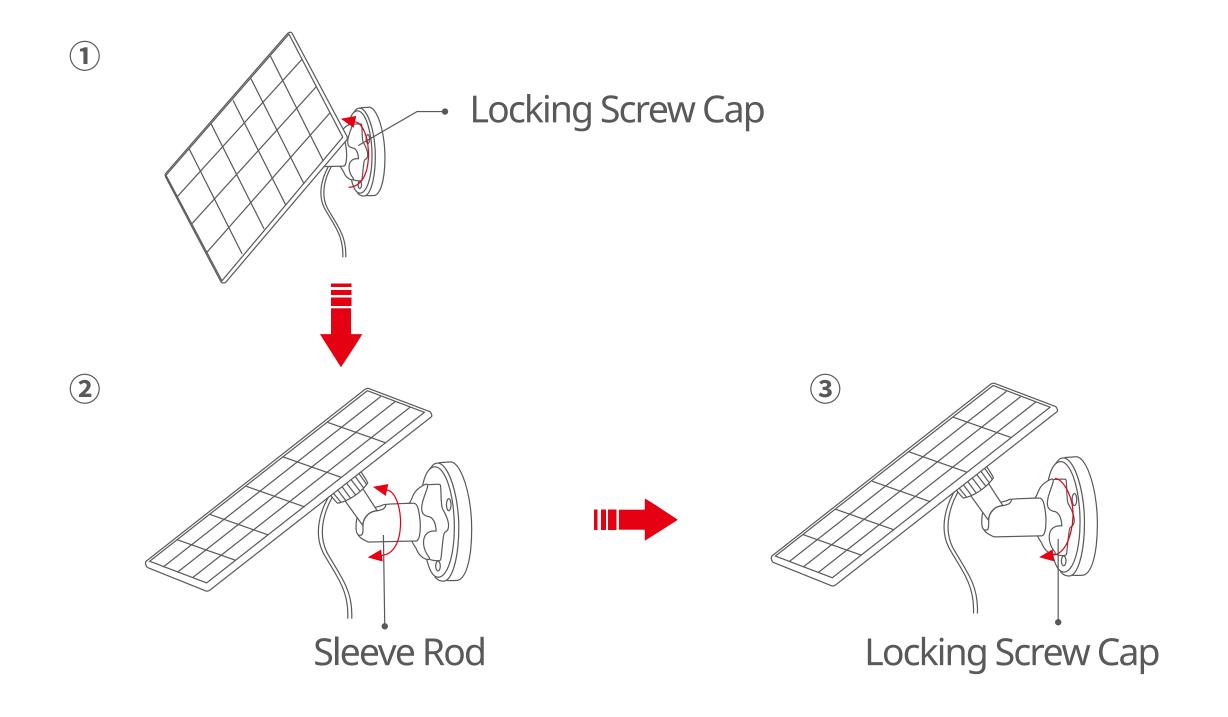


6. When completed, please check that all the locking mechanisms are tightly secured.

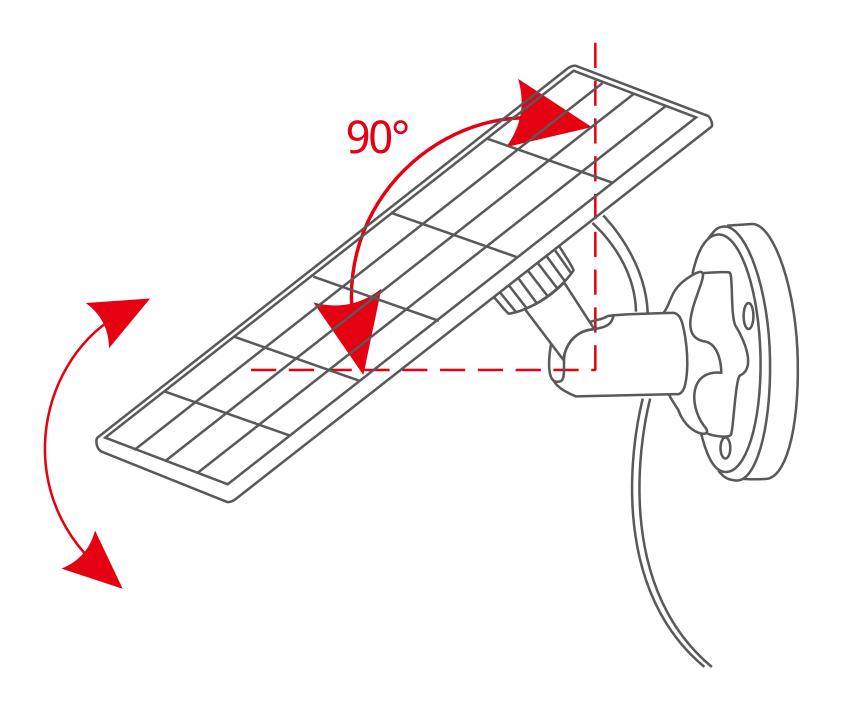


How to Position The Solar Panel?

- 1. Find an area that gets the most direct sunlight throughout the day.
- 2. Angle the solar panel upward 30°.
- 3. Point it south if in the northern hemisphere and north if in the southern hemisphere.

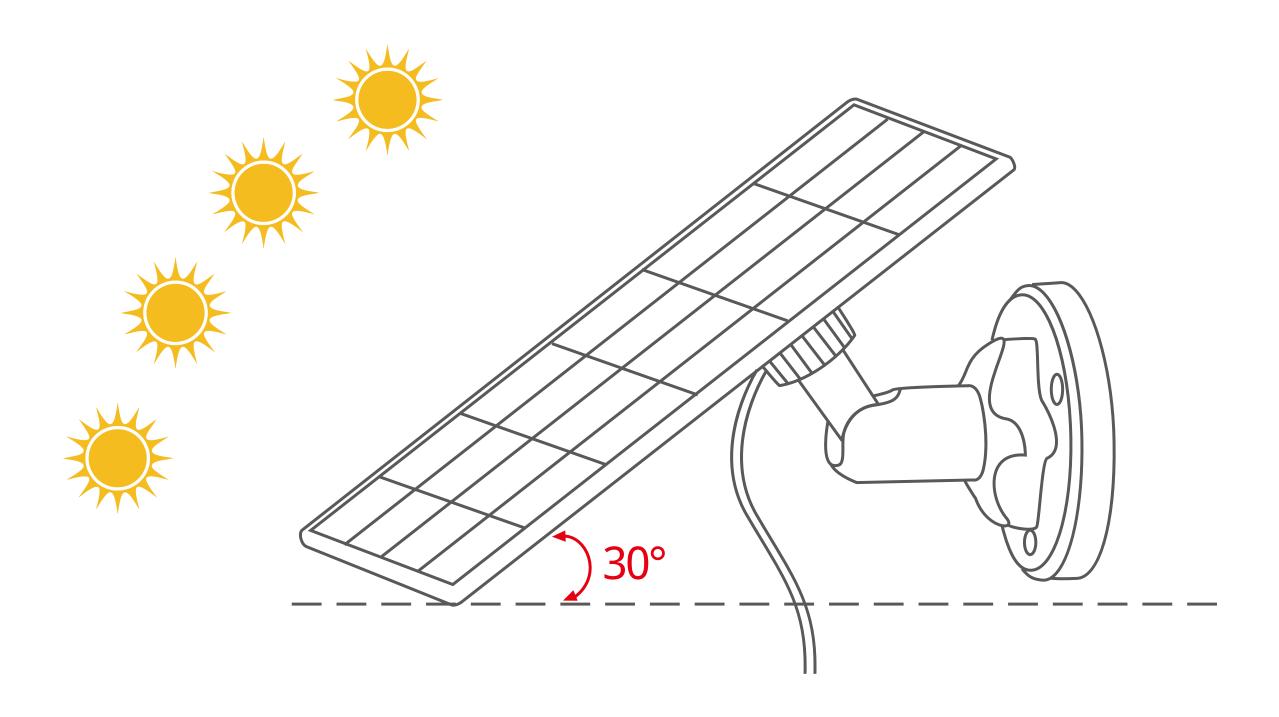

Important Notes:

- 1. Wipe the face of the solar panel with a soft damp cloth regularly to clear any dust or debris.
- 2. Be sure to update the firmware version of the camera to the latest version.
- 3. Place the solar panel in an area with consistent sunlight throughout the year. It only needs a few hours of direct sunlight each day to keep your camera powered.
- 4. The amount of energy that the solar panel produces will be affected by weather conditions, seasonal changes, geographic location, etc.

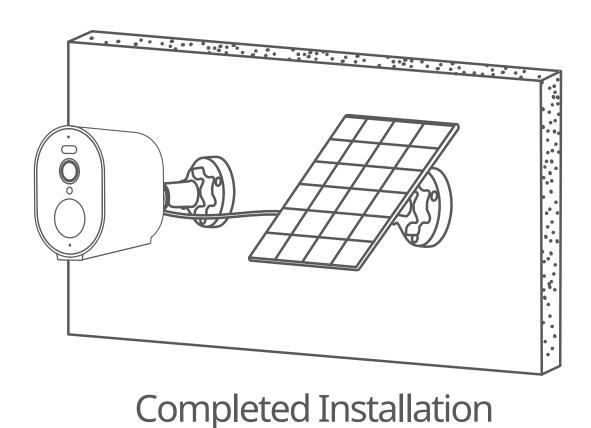

FCC WARNING:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. including interference that may cause undesired operation. This equipment complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

ISEDC RSS WARNING:

This device compiles with SEDC licence-exempt RSS standard(s). Operation is subject to the following two conditions (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Congratulations!

Your solar panel is ready to use. Thank you for choosing blurams.

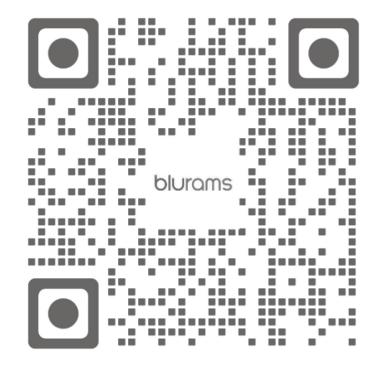

blurams Facebook



blurams Instagram

support@blurams.com www.blurams.com